

Electric bike repair stand 2.0

SCALE CALIBRATION PROCEDURE


Scale calibration is required, if the following spare parts are replaced:

1. Middle assembly
2. Chain assembly
3. Scale electronics
4. Upper assembly

1. Drive the clamping master arm to a height of 110 cm



2. Hold the button **SETTINGS** on the control panel for about 1 second to enter the settings menu and press the button **SETTINGS** once again to enter calibration page, as shown on picture below.

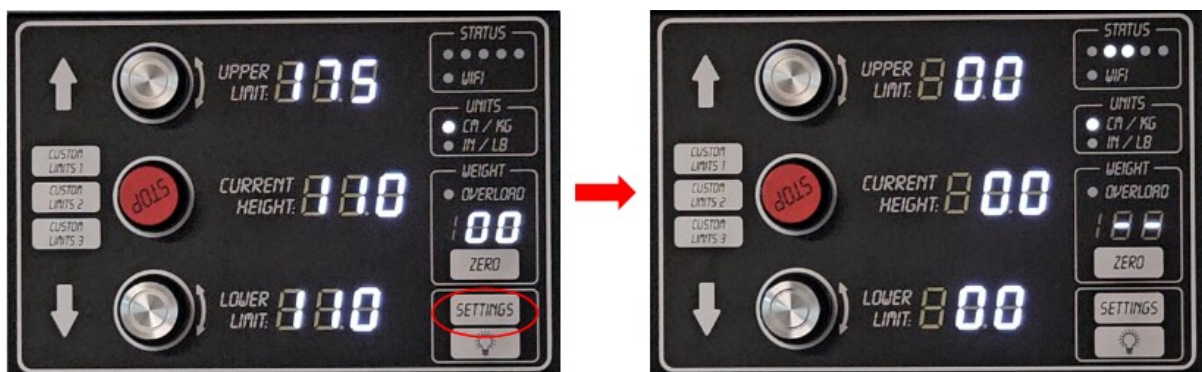


3. Calibration is performed in 5 steps

- First, ensure there is no weight on the master arm and confirm zero weight by holding the STOP button pressed for about 3 seconds until the beep sound and change of numbers on display to 05 on upper display and 10 on lower display


- the second step requires to hang the weight between 5 kg and 10 kg on the master arm. By rotating the STOP button set the value on middle display that is equal to real weight that is hanged on master arm. Then confirm this step by holding the STOP button pressed again for about 3 seconds (in our case, we hung 7 kg on the master arm and set the number 7 on the control panel as shown on picture below.



- In second step it requires to hang on the weight in the range between 15 kg and 25 kg., as indicated by value 15 on upper display and 25 on lower display. Repeat the process of setting the middle-display number to match real weight on the master arm. Then confirm this step by holding the STOP button pressed again for about 3 seconds (in our case, we hung 7 kg on the master arm and set the number 17 on the control panel as shown on picture below.

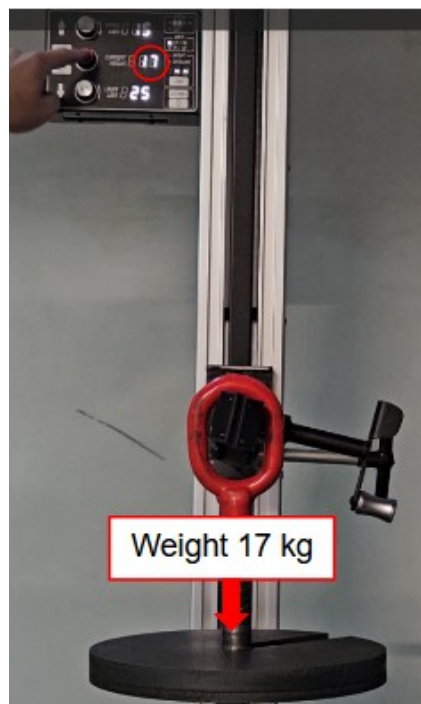

- In third, last step, it requires to hang on the weight in the range between 60 kg and 70 kg, as indicated by value 60 on upper display and 70 on lower display. Repeat the process of setting the middle-display number to match the real weight on the master arm. Then confirm this step by holding the STOP button pressed again for about 3 seconds (in our case, we hanged 67 kg on the master arm and set the number 67 on the control panel as shown on picture below.

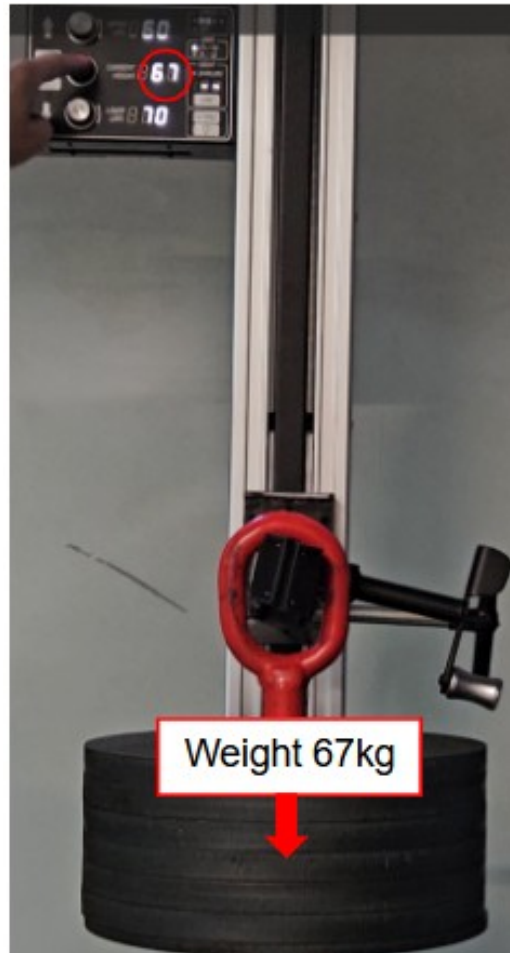

After confirming the third step the stand will automatically exit calibration mode and will be ready for use.