

# Bolt cutters with interchangeable triangular cutting edges

#### 596PLUS/6G



#### **Profiles**



#### Product features

- material: premium hard chrome vanadium steel
- jaws exchangeable and adjustable in three position, entirely hardened and tempered
- steel handles, lacquered, heavy duty plastic handles


#### Advantages:

- extreme strength and minimum weight
- outstanding resistance to the maximum forces generated during cutting
- complete anti-corrosion resistance
- straightforward guidance and proper handling
- shock absorber for the prevention of injuries
- triangular blade threefold longer service life
- the procedure for adjusting the jaw cutting edges

#### How to adjust the cutting edges?

- Release the safety nut.
- Take the screw out of the groove and turn it until there is no spacing between the cutting edges

• Secure the safety nut.

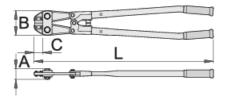

|        | L   | A  | В   | C  | <b>*</b> |
|--------|-----|----|-----|----|----------|
| 615256 | 750 | 43 | 96  | 46 | 4060     |
| 615257 | 900 | 47 | 109 | 50 | 6300     |

### cutting capacity (10N=1kg)


|        |     |   | max 750 N/mm² Ø <b>ī</b> |
|--------|-----|---|--------------------------|
| 615256 | 750 | 8 | 13                       |
| 615257 | 900 | 9 | 16                       |

<sup>\*</sup> Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.

## Usage (pictures)





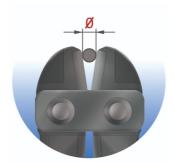



# Spare parts



Spare jaw for 596PLUS/6G



Spare cutting edges for 596PLUS/6G

## Frequently asked questions

Can we eliminate the clearance between the blades of the bolt cutter? Of course. The procedure is described in the instructions.

If we change the triangular blade, do we have to adjust the clearance as well?

When installing, it is necessary to make sure that the blades are installed in parallel and that the screws are tightened accordingly.