 


IRONGATOR műhelysatu gyorsmozgató rendszerrel

721Q/6

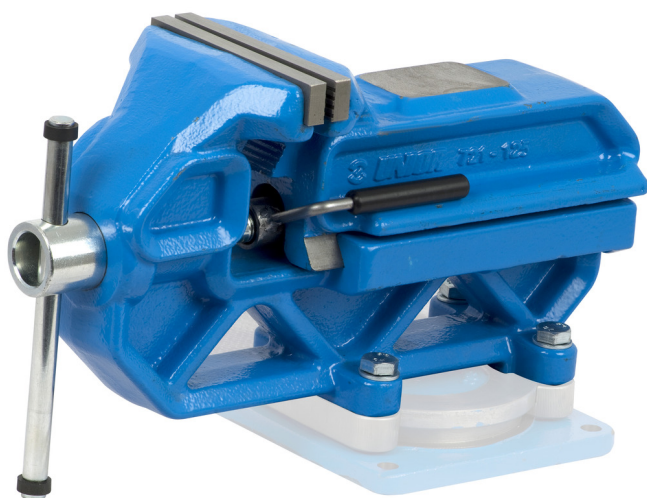


Profilok



Termékjellemzők


- szürke vasöntvény
- befogópofák szerszámacélból kovácsolva és nemesítve
- porlakkozás, pofák olaj korrózióvédelemmel, egyéb részei horganyzottak
- uniPRO csúszkák biztosítják a mozgórész precíz futását
- a műhelysatu forgótalppal kombinálható
- gyorsmozgató rendszer

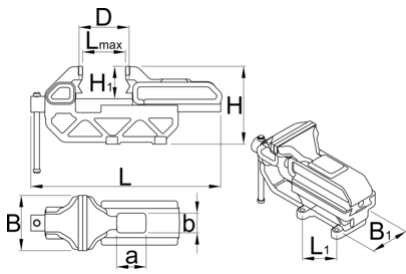

	B	L [↑]	L	D	H1	a	b	H	L1	B1	
621482	125	120	336	17 - 62	95	66	44	176	132	90	14500
621568	150	140	400	20 - 75	117	80	53	211	154	105	23500

* A termékeképek illusztrációk. Minden feltüntetett méret milliméterben, a tömegek grammokban. Az összes feltüntetett méret eltérhet a toleranciának megfelelően.

 
Használat (pictures)

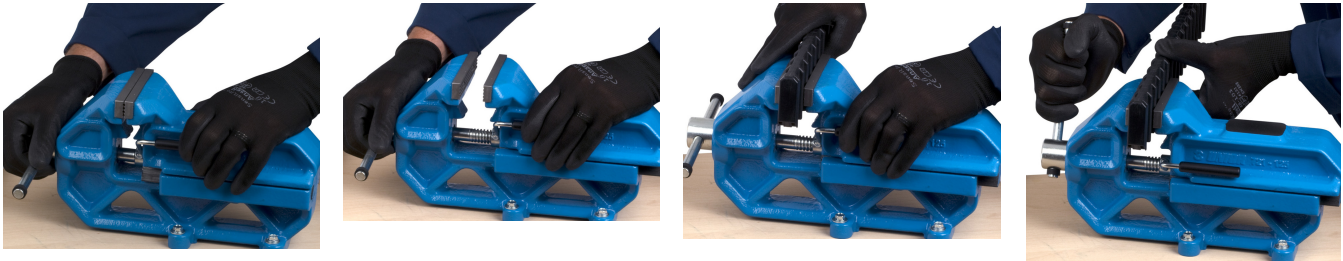

Accessories



 Forgótalp 721/6 és 721Q/6 satukhoz



Cserélhető alumínium befogópofa 721/6 és 721Q/6 satukhoz

Pótalkatrészek



Cserélhető befogópofák 721/6 és 721Q/6 satukhoz



Cserélhető alumínium befogópofa 721/6 és 721Q/6 satukhoz

Safety tips



- Avoid clamping with heavy pressure on the corner of the vice jaws as it may break off a corner of a jaw.
- Replace a bent handle as soon as possible.
- Use bolts in all of the holes in the base of the vice.
- Use lock washers under the nuts.
- When work is held in a vice for sawing, saw as close to the jaws as possible to prevent vibrations. Be careful not to cut into the jaws.
- When clamping extra long work, support the far end of work rather than putting extra pressure on the vice.
- Regularly lightly oil all moving parts.
- If the threaded part of the vice is exposed, keep it free of chips and dirt.
- Discard any vice that exhibits the slightest hairline fracture.
- Always use a vice large enough to hold the work without strain.



- Don't use the jaws of a vice as an anvil.
- Never use an extension handle for extra clamping pressure.
- Never pound on the handle to tighten beyond hand pressure.
- Never try to repair a vice by welding or brazing.
- Don't try to bend a heavy rod in a light vice.