

## Okretno postolje za stege 721/6 i 721Q/6

721.1/6




## Profili





## Opis proizvoda

- bazna ploča od sivog livenog gvožđa
- materijal ostalih delova: specijalni alatni čelik
- okretno postolje može se rotirati za 360°

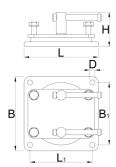

|        | 1   | L     | В     | Н    | B1  | L1  | D    | •    |
|--------|-----|-------|-------|------|-----|-----|------|------|
| 621566 | 80  | 96    | 96    | 47   | 81  | 81  | 6.5  | 2570 |
| 621483 | 125 | 149.9 | 149.9 | 70   | 126 | 126 | 10.5 | 2590 |
| 621569 | 150 | 190   | 190   | 87.5 | 160 | 160 | 13   | 5240 |
| 621572 | 200 | 210   | 210   | 93.5 | 176 | 176 | 13   | 6600 |

<sup>\*</sup> Fotografije proizvoda su simbolične. Sve dimenzije su u mm, a težina u gramima. Sve navedene dimenzije mogu odstupati u granicama tolerancija.

## Pravilna upotreba



- Avoid clamping with heavy pressure on the corner of the vice jaws as it may break off a corner of a jaw.
- Replace a bent handle as soon as possible.
- Use bolts in all of the holes in the base of the vice.
- Use lock washers under the nuts.
- When work is held in a vice for sawing, saw as close to the jaws as possible to prevent vibrations. Be careful not to cut into the jaws.
- When clamping extra long work, support the far end of work rather than putting extra pressure on the vice.
- Regularly lightly oil all moving parts.
- If the threaded part of the vice is exposed, keep it free of chips and dirt.
- Discard any vice that exhibits the slightest hairline fracture.
- Always use a vice large enough to hold the work without strain.



- Don't use the jaws of a vice as an anvil.
- Never use an extension handle for extra clamping pressure.
- Never pound on the handle to tighten beyond hand pressure.
- Never try to repair a vice by welding or brazing.
- Don't try to bend a heavy rod in a light vice.