 


Disc brake piston spreader

1750/2BI



Usage

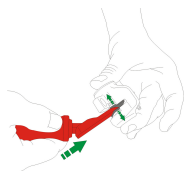

Profiles




[./\(eng/support/waranty\)](https://uniortools.com/en/support/warranty).

Product features

- material: premium flex chrome vanadium steel
- ergonomic heavy duty double component handle
- surface finish: chrome plated to standard ISO 1456:2009
- Tool is bended under 30°.
- Use for changing bike brake pads.

How to use the tool:

1. remove wheel from bike
2. insert spreader between brake pads, pushing tool till the both brake pistons are back in the caliper body
3. remove the spreader and old brake pads
4. insert new brake pads
5. reinstall wheel back on

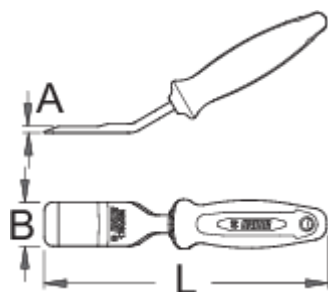



A

B

L




621889

3,5

25

160,5

130

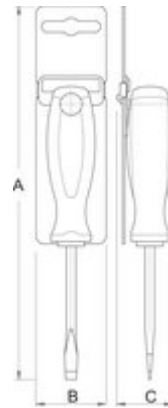

Retail packaging



MA

MB

MC




621889

230

44

35

142

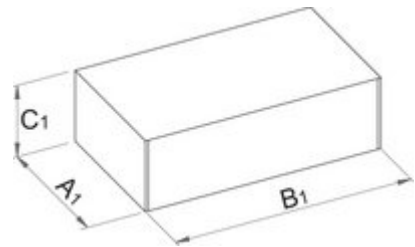

Transport packaging



TA

TB

TC



621889

4

95

240

64

633