

# Pneumatische slijpmachine

### 1510



#### Profielen



#### Product attributen

- free speed 10000 revolution per minutes
- maximum air pressure : 6,2 Bar
- air consumption 212 l/min
- air inlet 1/4"
- Velcro sander pad


#### Voordelen:

- the ergonomic shape of the handle enables good grip and prevents gliding
- suitable for lefthanders as well as for right-handers
- silent and powerful drive
- handy on/off switch
- exhaustion of parts into a bag for a cleaner workplace
- flexible and robust pipe for cleaning dust

- it does not leave edges on the working platform
- better work conditions due to minimal vibrations
- extreme power based on its weight (1.2 kg)

#### Gebruik:

- vehicle workshops
- preparation of different working platforms for further process
- ideal for grinding construction steel, metals and wood
- The basis of sander is VELCRO<sup>™</sup> system which is: quick, simple and safe to mount and unmount various sander pads. This system is being used for various occasions the best known example is training shoes with VELCRO<sup>™</sup> fastening.

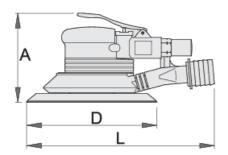

	N⁰	L	А	D	<b>1</b>
617733	2.5	220	105	150	1600
617713	5	220	105	150	1615

\* Afbeeldingen van producten zijn symbolisch. Alle afmetingen zijn in mm en gewicht in gram. Alle vermelde afmetingen kunnen variëren in tolerantie.

#### Gebruik (Afbeeldingen)

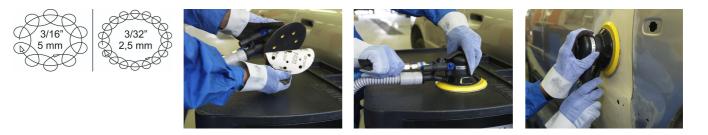


Foto (Afbeeldingen)



## Accessoires





Koppeling, man



Koppeling, vrouw



📕 Koppeling, vrouw



Pneumatische filterdrukregelaar en olievernevelaar 3/8"



Pneumatische filterdrukregelaar en olievernevelaar 1/2"



Spiraalslang

## Veiligheidstips

## $\checkmark$

• The pressure in the tool during the operation has to be at least 6.2 bar for the tool to work properly.

• Regularly clean and dry the air filters and inlet air supply.

• Always use clean and dry air with the correct mixture of oil, for maximum tool life.

• Check the joints and ensure that the tubes and other equipment are not damaged before use.



• Always disconnect tools not in use from the air supply.

• All tools should be gently oiled prior to being stored.

• Always store pneumatic tools in dry places away from water.

• Always use original spare parts.

• Repairs can be performed only by authorised staff people authorised by Unior d.d.