

Torque wrench

263



Profiles



Product features

- Accuracy: +/-3%
- micrometer scale for simple and error free settings
- adjustment lock to set torque
- QUICK ADJUSTMENT - Just eight turns to cover the entire scale
- Torque application: both way, but always apply in direction specified on torque wrench handle
- handle: Two component material
- dual scale lbf.ft and Nm
- Convenient hanger feature for wrench unlocking and adjustment.
- 5° working angle

Warranty







- 1 year warranty
- Extend warranty for your product (<https://uniortools.com/eng/support/product-registration>)

Important!

- Do not use torque wrench for untightening!
- Torque tightens only in the direction showed on the key sticker! Sticker shows the proper direction of tightening!

- The default calibration interval of the torque wrench is 12 months or 5.000 measurements from the date of end user purchase.
- ALWAYS set the measuring mechanism to starting point, at the end of work.
- When the requested torque is reached, please do not tight any more.
- Torque wrench can be damaged, if manual instructions are not considered.



|  |  |  |  |  |  |
|--|---|---|---|---|---|
| 626765 | 3/8" | 12 - 60 | 10 - 45 | 328 | 700 |
| 626766 | 1/2" | 40 - 200 | 30 - 150 | 459 | 1000 |
| 626767 | 1/2" | 60 - 340 | 50 - 250 | 679 | 1550 |

* Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.

Usage (pictures)



Photo (pictures)



Safety tips



- Only an authorised person in a certificated service centre can perform technical maintenance.
- Tools should always be serviced and calibrated by a certified service engineer.
- Tool should only be used for precise tightening as specified in the instruction manual.
- Check instruction manual on how to read the value scale on the tool properly.
- Stop tightening after hearing a feedback from the tool.
- Use only sockets with the same square drive.
- Always return the value on the scale back to 0 after usage and before storing.

Safety (pictures)

