

# Momentsleutel, digitaal

266



## Profielen

---



## Product attributen




- target torque warning: buzzer + 12 LED lights
- operation mode: peak hold / track
- unit selection: N-m, in-lb, ft-lb, kg-cm
- head type: interchangeable head
- gear teeth: 52
- battery: AA × 2 pcs (not included)
- battery life (continuous operation): 110 hrs.
- battery life (standby): 1 year

- data memory size: 250 inputs
- 10 preset torque settings
- operating temperature: -10°C ~ 60°C
- storage temperature: -20°C ~ 70°C
- humidity: up to 90 % non-condensing
- drop test: 1 m
- vibration test: 10G
- electromagnetic compatibility certificate
- accuracy CW: +/-2%, CCW: +/-3%
- PC connectivity
- Download data transfer program  
([https://www.uniortools.com/res/files/assets/Uploads/266\\_calibration\\_program.zip](https://www.uniortools.com/res/files/assets/Uploads/266_calibration_program.zip))

## Warranty

- warranty: 10.000 cycle / one year



					
627575	1/4"	1,5 - 30	390	9 x 12	1395
627576	1/2"	6,8 - 135	410	9 x 12	1619
627577	1/2"	10 - 200	545	14 x 18	2268

\* Afbeeldingen van producten zijn symbolisch. Alle afmetingen zijn in mm en gewicht in gram. Alle vermelde afmetingen kunnen variëren in tolerantie.

## Gebruik (Afbeeldingen)



## Foto (Afbeeldingen)



## Accessoires



Insteek-ratel voor 266



Insteek-moersleutel, verstelbaar voor 266



Insteek-ringsleutel, open voor 266

## Veiligheidstips



- Only an authorised person in a certificated service centre can perform technical maintenance.
- Tools should always be serviced and calibrated by a certified service engineer.
- Tool should only be used for precise tightening as specified in the instruction manual.
- Check instruction manual on how to read the value scale on the tool properly.
- Stop tightening after hearing a feedback from the tool.
- Use only sockets with the same square drive.
- Always return the value on the scale back to 0 after usage and before storing.

## Veiligheid (Afbeeldingen)

