

# Ključ moment digitalni

266



## Profili

---



## Opis proizvoda






- upozorenja kod dostignutog momenta: zvučni signal + 12 LED lampica
- režim rada: merenje vrednosti/praćenje vrednosti
- merne jedinice: Nm, in-lb, ft-lb, kg-cm
- izmenljiva glava
- broj zuba čegrtaljke: 52
- baterije: AA x 2 komada (nisu priložene)
- radni vek baterija: 110 časova
- radni vek baterija u "standby" režimu: 1 godina

- memorija: 250 merenja
- prethodno podešavanje 9 vrednosti momenta
- radna temperatura: -10°C ~ 60°C
- temperatura skladištenja: -20°C ~ 70°C
- vlažnost okruženja: to 90% bez kondenzacije
- test na slobodan pad: 1 m
- test na vibracije: 10G
- sertifikat za elektromagnetnu kompatibilnost
- tačnost: ±2% prilikom upotrebe u pravcu kretanja kazaljke na satu; ±3% prilikom rada u suprotnom pravcu
- mogućnost povezivanja sa računarom
- Download data transfer program  
([https://www.uniortools.com/res/files/assets/Uploads/266\\_calibration\\_program.zip](https://www.uniortools.com/res/files/assets/Uploads/266_calibration_program.zip))

## Garancija

- garancija: 10.000 merenja/1 godina



					
627575	1/4"	1,5 - 30	390	9 x 12	1395
627576	1/2"	6,8 - 135	410	9 x 12	1619
627577	1/2"	10 - 200	545	14 x 18	2268

\* Fotografije proizvoda su simbolične. Sve dimenzije su u mm, a težina u gramima. Sve navedene dimenzije mogu odstupati u granicama tolerancija.

## Upotreba (slike)



## Slika (slike)



## Dodatna oprema



Glava sa čegrtaljkom za art. 266



Ključ podešavajući za art. 266



Nastavak okasti otvoreni za art. 266

## Pravilna upotreba



- Only an authorised person in a certificated service centre can perform technical maintenance.
- Tools should always be serviced and calibrated by a certified service engineer.
- Tool should only be used for precise tightening as specified in the instruction manual.
- Check instruction manual on how to read the value scale on the tool properly.
- Stop tightening after hearing a feedback from the tool.
- Use only sockets with the same square drive.
- Always return the value on the scale back to 0 after usage and before storing.



## Bezbednost (slike)

