

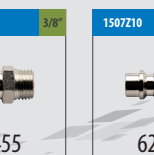
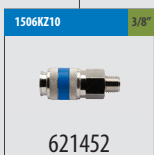
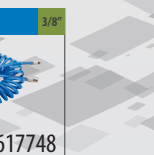
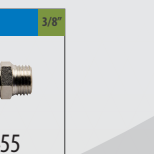
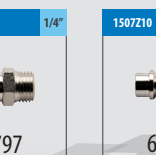
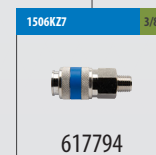
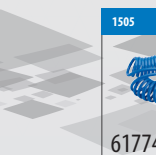
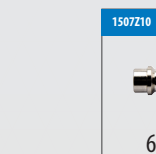


Scheme A · Abbildung A · Schema A · Схема A ·
Схемата A · Esquema A · Obrázku A · Schéme A ·
Шема A · Shema A · Schéma A · Šemi A

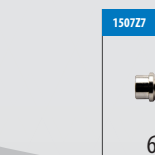

maximum air pressure : 9,5 Bar

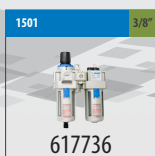

- 1591 (615325)
- 1592 (615326)
- 1596 (617690)
- 1597 (617691)

- 1517 P (617728)
- 1517 S (617729)
- 1541 (615320)
- 1561 (615322)
- 1551 (615319)
- 1562 (615321)
- 1571 (615324)
- 1510 (617733, 617713)
- 1514 (617714, 617715)
- 1532 (627566)

- 1552 (627567)
- 1563 (627568)
- 1513 (617726)
- 1515 H (617727)
- 1516 (617731)
- 1516 A (617732)
- 1531 (615318)
- 1518 (617730)
- 1564 (627569)
- 1566 (627570)

- 1572 (615323)
- 1573 (627571)

How to fasten with the right wrench?

1506KN7	617795	1/4"	20	
1506KN7	617796	3/8"	20	
1506KZ7	617793	1/4"	20	
1506KZ7	617794	3/8"	20	
1506KZ10	621452	3/8"	24	
1506KZ10	621453	1/2"	24	
1506KZ10	621454	3/4"	27	
1507Z7	617797	1/4"	14	
1507Z7	617798	3/8"	19	
1507Z7	618483	1/2"	22	
1507Z10	621455	3/8"	17	
1507Z10	621456	1/2"	24	
1507Z10	621457	3/4"	27	

- 1508A (617767)
- 1508B (617768)
- 1541 (615320)
- 1531 (615318)
- 1522 (627565)



Warning!

- Read instructions before using the tool!
- Always wear protective equipment!