




Unior clamps 1693 explained

	<p>Pro repair clamp, auto adjustable 1693.1</p>	<p>Clamps diameters from 24 to 32 mm</p>	<p>Jaws of the clamp are automatically adjusted by spring.</p> <p>To clamp the part just insert the clamped part between the jaws and close it with the handle.</p> <p>To release the part, open the handle.</p>	<p>Works best when clamping lots of bikes with traditional aluminum or steel seat post.</p> <p>For clamping carbon or dropper seat posts consider using 1693.1S or 1693.1Q</p>
	<p>Pro repair clamp, manually adjustable 1693.1S</p>	<p>Clamps diameters from 24 to 38 mm</p>	<p>Jaws of the clamp need to be manually adjusted by turning the nut on the clamp.</p> <p>To clamp the part insert the clamped part between the jaws, manually adjust the opening of the jaws with the nut to the appropriate diameter and close it with the lever.</p> <p>To release the part, open the handle.</p>	<p>Suitable for clamping any kind of parts even carbon and dropper seat posts.</p> <p>Compared to 1693.1Q takes more time to clamp parts and don't have so sophisticated clamping force modulation.</p> <p>For faster and more precise work consider using 1693.1Q</p>
	<p>Pro shop clamp 1693.1Q</p>	<p>Clamps diameters from 22 to 60 mm</p>	<p>Insert clamped part between jaws and squeeze them together, to get them closer to the clamped part.</p> <p>Turn the handle clockwise, so the clamp will firmly grab the clamped part between the jaws. By turning the handle you can simply control the clamping force.</p> <p>To release the clamp, turn the handle counterclockwise and release the button on the other side of the clamp.</p>	<p>Most sophisticated clamp in our offering with quick clamping action and precise clamping force modulation.</p> <p>Suitable for clamping even the most sensitive parts.</p>

**all clamps are compatible with all models of Unior bike repair stands*