




1. The replacement can only be carried out by a qualified person and according to the manufacturer's instructions

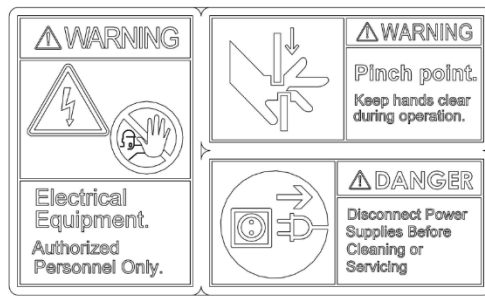

2. First, unplug the stand from the power supply

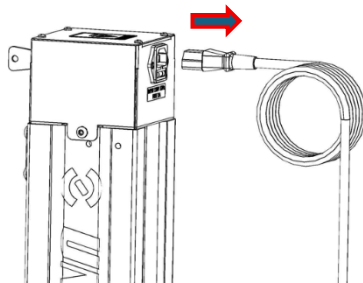

3. Just unscrew the screws of the existing capacitor

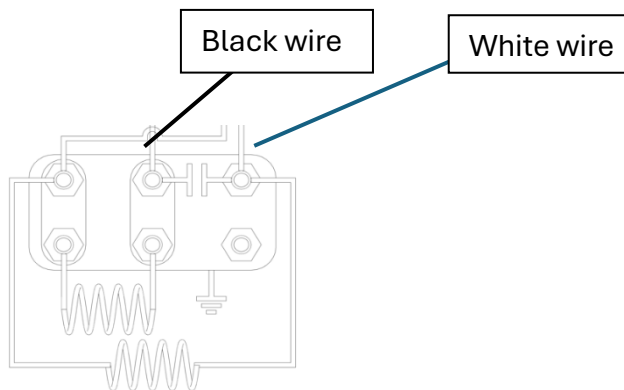

4. EN-Before connecting the power cable, check if the engine connection cover is in place. IT-Prima di collegare il cavo di alimentazione, controlla se il coperchio della connessione del motore è installato. FR-Avant de brancher le câble de connexion, vérifie si le capuchon de la connexion du moteur est en place. DE-Überprüfe vor dem Anschließen des Anschlusskabels, ob die Motoranschlussabdeckung angebracht ist. ES-Antes de enchufar el cable de conexión, verifica si está puesto el tapón de conexión del motor. CH-在连接电缆之前，检查一下电机连接口的盖子是否安装好了