Škripac IRONGATOR


721/6



Profili

Atributi proizvoda

- kućište od sivog lijeva
- čeljusti od ugljičnog čelika, kovane, ojačane i zakaljene
- kućište lakirano, čeljusti zaštićene od korozije, ostali dijelovi pocinčani
- vreteno zaštićeno od oštećenja
- uniPRO vođice omogućuju precizan rad pokretnih dijelova
- stega se može kombinirati sa okretnim postoljem

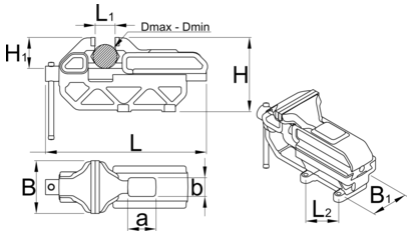

	B	L	L	D	H1	a	b	H	L1	B1	
621564	80	100	215	11 - 35	46	42	28	113	70.4	48	3500
621481	125	160	336	17 - 62	73	66	44	176	110	75	14400
621567	150	190	400	20 - 66	88	80	53	211	132	90	24200
621570	200	220	461	24 - 80	103	93	62	265	154	105	37800

* Slike proizvoda su simbolične. Sve dimenzije su u mm, masa je u g.

Upotreba (pictures)





Accessories



Okretno postolje za škripce 721/6 i 721Q/6



Rezervene čeljusti za 722/6 aluminijumske

Rezervni dijelovi



Rezervna čeljust za 722/6



Rezervene čeljusti za 722/6 aluminijumske

Safety tips

- Avoid clamping with heavy pressure on the corner of the vice jaws as it may break off a corner of a jaw.

- Don't use the jaws of a vice as an anvil.
- Never use an extension handle for extra clamping pressure.

- Replace a bent handle as soon as possible.
- Use bolts in all of the holes in the base of the vice.
- Use lock washers under the nuts.
- When work is held in a vice for sawing, saw as close to the jaws as possible to prevent vibrations. Be careful not to cut into the jaws.
- When clamping extra long work, support the far end of work rather than putting extra pressure on the vice.
- Regularly lightly oil all moving parts.
- If the threaded part of the vice is exposed, keep it free of chips and dirt.
- Discard any vice that exhibits the slightest hairline fracture.
- Always use a vice large enough to hold the work without strain.
- Never pound on the handle to tighten beyond hand pressure.
- Never try to repair a vice by welding or brazing.
- Don't try to bend a heavy rod in a light vice.