# IRONGATOR mühendis mengenesi


721/6



## Profiles

## Product features

- gri demir dökümden muhafaza
- karbon alet çeliğinden, serleştirilmiş ve temperlenmiş sıcak dövme çeneler
- lake kaplı muhafaza, korozyon önleyici yağla kaplı çeneler, çinko kaplı diğer parçalar
- hasara karşı korumalı mil
- uniPRO sürgüleri, hareketli parçaların hassas çalışmasını sağlar
- mühendis mengenesi, döner tablayla birleştirilebilir

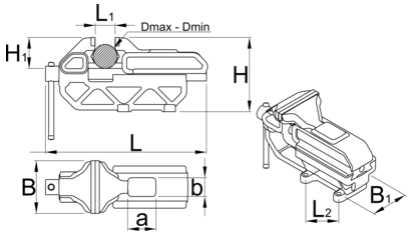

| | B | LT | L | D | H1 | a | b | H | L1 | B1 | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 621564 | 80 | 100 | 215 | 11 - 35 | 46 | 42 | 28 | 113 | 70.4 | 48 | 3500 |
| 621481 | 125 | 160 | 336 | 17 - 62 | 73 | 66 | 44 | 176 | 110 | 75 | 14400 |
| 621567 | 150 | 190 | 400 | 20 - 66 | 88 | 80 | 53 | 211 | 132 | 90 | 24200 |
| 621570 | 200 | 220 | 461 | 24 - 80 | 103 | 93 | 62 | 265 | 154 | 105 | 37800 |

* Ürünlerin resimleri semboliktir. Bütün boyutlar mm ve ağırlık gram cinsindendir.

### Usage (pictures)




## Accessories


721/6 ve 721Q/6 için döner tabla


721/6 ve 721Q/6 için yedek alüminyum çene

## Spare parts


721/6 ve 721Q/6 için yedek çene


721/6 ve 721Q/6 için yedek alüminyum çene

## Safety tips

- Avoid clamping with heavy pressure on the corner of the vice jaws as it may break off a corner of a jaw.

- Don't use the jaws of a vice as an anvil.
- Never use an extension handle for extra clamping pressure.

- Replace a bent handle as soon as possible.
- Use bolts in all of the holes in the base of the vice.
- Use lock washers under the nuts.
- When work is held in a vice for sawing, saw as close to the jaws as possible to prevent vibrations. Be careful not to cut into the jaws.
- When clamping extra long work, support the far end of work rather than putting extra pressure on the vice.
- Regularly lightly oil all moving parts.
- If the threaded part of the vice is exposed, keep it free of chips and dirt.
- Discard any vice that exhibits the slightest hairline fracture.
- Always use a vice large enough to hold the work without strain.
- Never pound on the handle to tighten beyond hand pressure.
- Never try to repair a vice by welding or brazing.
- Don't try to bend a heavy rod in a light vice.