

# Szigetelt lapos (SL) villanyszerelő csavarhúzó VDE TBI markolattal

603VDE TBI



## Profilok




## Szabványok

DIN EN IEC 60900 (VDE 0682-201):2019-04; EN IEC 60900:2018

## Termékjellemzők

- szár: Premium Hard króm-vanádium acél, teljes anyagában nemesített
- hegy feketített
- markolat: ergonomikus kialakítású
- háromkomponensű műanyag markolat
- függeszthető
- DIN EN IEC 60900 (VDE 0682-201):2019-04; EN IEC 60900:2018 szabvány szerint
- ISO 8764-1, 2 szabványok szerint

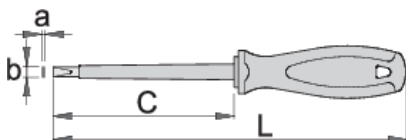



axb

C


L





	axb	C	L	
616436	0.4 x 2.5	75	160	33
616437	0.5 x 3.0	100	185	37
616438	0.6 x 3.5	100	185	39
616439	0.8 x 4.0	100	185	43
621247	1.0 x 4.5	125	225	75
616440	1.0 x 5.5	125	225	75
616441	1.2 x 6.5	150	260	113
616442	1.2 x 8.0	175	295	163
621248	1.6 x 10.0	200	320	115

\* A termékeképek illusztrációk. Minden feltüntetett méret milliméterben, a tömegek grammban. Az összes feltüntetett méret eltérhet a toleranciának megfelelően.


## Használat (pictures)

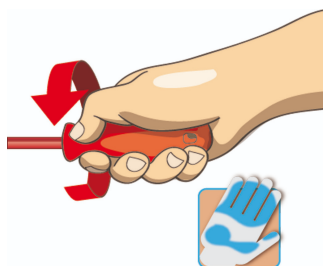

Nagyobb érintkezési felület a kézzel a nagyobb nyomaték érdekében.

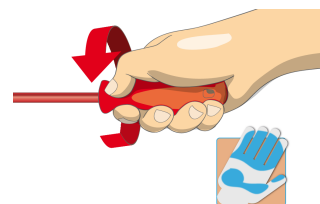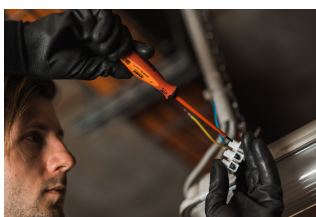

Ergonómiailag tervezett markolat = a kéz védelme

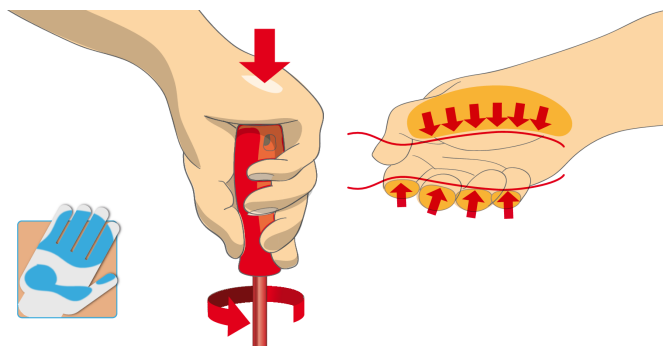

Nagyobb érintkező felület a kézzel = nagyobb nyomaték

## Safety tips



- Use a screw holding screwdriver to get screws started in awkward, hard-to-reach areas.
  - Use a stubby screwdriver in close quarters where a conventional screwdriver cannot be used.
  - A rounded tip should be redressed with a file; make sure edges are straight.
  - Screwdrivers used in the shop are best stored in a rack. This way, the proper selection of the right screwdriver can be quickly made.
  - Keep the screwdriver handle clean; a greasy handle is apt to cause accidents.
  - A screwdriver should never be used as pry bar. If it is overstressed in this manner, the blade might break and send a particle of steel into the operator's arm or even towards his eyes.
  - VDE tools that have several parts, have to be assembled correctly before use.
  - When working with VDE tools avoid contact with water.
- Don't use pliers on the handle of a screwdriver to get extra turning power. A wrench should only be used on the square shank or bolster of a screwdriver that is especially designed for that purpose.
  - Don't expose a screwdriver blade to excessive heat as it may reduce the hardness of the blade.
  - Don't use a screwdriver with a split or broken handle.
  - Don't use a regular screwdriver to check a storage battery or to determine if an electrical circuit is live.
  - Don't use tools that shows sign of wear and have the second layer of plastic visible.

## Frequently asked questions

### **Are insulated (VDE) tools considered as personal protective equipment (PPE)?**

According to EU regulations, VDE tools are not considered as PPE.

### **Are the VDE tools only being sampled in series production?**

The high voltage test (at 10kV) is performed fully on each tool. Other tests are performed in accordance with the EN60900 standard.