

Kaçavidë plus (PZ) i izoluar VDETBI

623VDETBI



Profiles




Standards

DIN EN IEC 60900 (VDE 0682-201):2019-04; EN IEC 60900:2018

Product features

- teh: çeliku krom-molibden vanadium-, thekur tërësisht dhe nevrík
- pikut nxirë
- trajtuar: formë ergonomik
- tre komponent material
- varur vrimë
- bërë sipas EN IEC 60900 standarde dhe ISO 8764-1,2




					
616460	PZ0	60	145	34	
616461	PZ1	80	180	60	


Barcode	+	C	L	Person	Clock
616462	PZ2	100	210	93	
616463	PZ3	150	270	156	Till end of stock

* Imazhet e produkteve janë simbolike. Të gjitha dimensionet janë në mm, pesha në gram. Të gjitha dimensionet e listuara mund të ndryshojnë në tolerancë.


Usage (pictures)

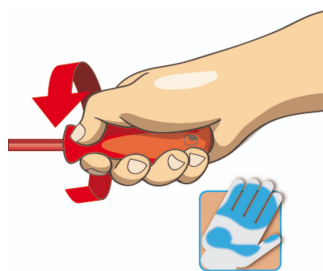

E madhe zona e kontaktit me dorë për më shumë pushtet çift rrotullues.

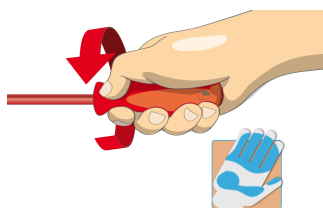

Ergonomik trajtuar dizajn = mbrojtur dorën tuaj

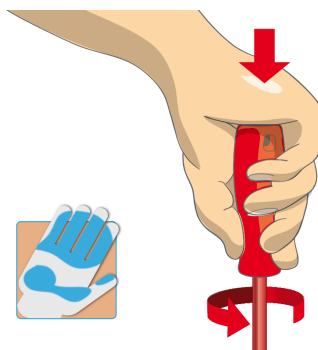

Dora e madhe zona e kontaktit = më shumë pushtet çift rrotullues

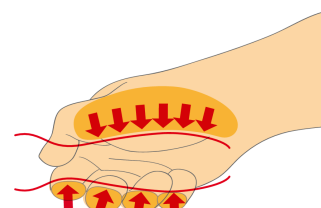


Photo (pictures)



Safety tips



- Use a screw holding screwdriver to get screws started in awkward, hard-to-reach areas.
- Use a stubby screwdriver in close quarters where a conventional screwdriver cannot be used.



- Don't use pliers on the handle of a screwdriver to get extra turning power. A wrench should only be used on the square shank or bolster of a screwdriver that is especially designed for that purpose.

- A rounded tip should be redressed with a file; make sure edges are straight.
- Screwdrivers used in the shop are best stored in a rack. This way, the proper selection of the right screwdriver can be quickly made.
- Keep the screwdriver handle clean; a greasy handle is apt to cause accidents.
- A screwdriver should never be used as pry bar. If it is overstressed in this manner, the blade might break and send a particle of steel into the operator's arm or even towards his eyes.
- VDE tools that have several parts, have to be assembled correctly before use.
- When working with VDE tools avoid contact with water.
- Don't expose a screwdriver blade to excessive heat as it may reduce the hardness of the blade.
- Don't use a screwdriver with a split or broken handle.
- Don't use a regular screwdriver to check a storage battery or to determine if an electrical circuit is live.
- Don't use tools that shows sign of wear and have the second layer of plastic visible.

Frequently asked questions

Are insulated (VDE) tools considered as personal protective equipment (PPE)?

According to EU regulations, VDE tools are not considered as PPE.

Are the VDE tools only being sampled in series production?

The high voltage test (at 10kV) is performed fully on each tool. Other tests are performed in accordance with the EN60900 standard.