

# Szigetelt dugókulcsos csavarhúzó VDE TBI markolattal

629VDE TBI



## Profilok




## Szabványok

DIN EN IEC 60900 (VDE 0682-201):2019-04; EN IEC 60900:2018

## Termékjellemzők

- szár: Premium Hard króm-vanádium acél, teljes anyagában nemesített
- markolat: ergonomikus kialakítású
- háromkomponensű műanyag markolat
- függeszthető
- DIN EN IEC 60900 (VDE 0682-201):2019-04; EN IEC 60900:2018 szabvány szerint
- DIN 3125 szabvány szerint



616464



5.5



125



225




80



|        |  |  |  |  |  |
|--------|---|---|---|---|---|
| 616465 | 6   | 125   | 225   | 82  |   |
| 616466 | 7   | 125   | 235   | 112   |   |
| 616467 | 8   | 125   | 235   | 116   |   |
| 623341 | 9   | 125   | 235   | 124   | Till end of stock   |
| 616468 | 10  | 125   | 235   | 122   |   |
| 623342 | 11  | 125   | 235   | 159   | Till end of stock   |
| 616469 | 13  | 125   | 245   | 179   |   |
| 623445 | 14  | 125   | 245   | 166   | Till end of stock   |

\* A termékeképek illusztrációk. Minden feltüntetett méret milliméterben, a tömegek grammokban. Az összes feltüntetett méret eltérhet a toleranciának megfelelően.

## Használat (pictures)

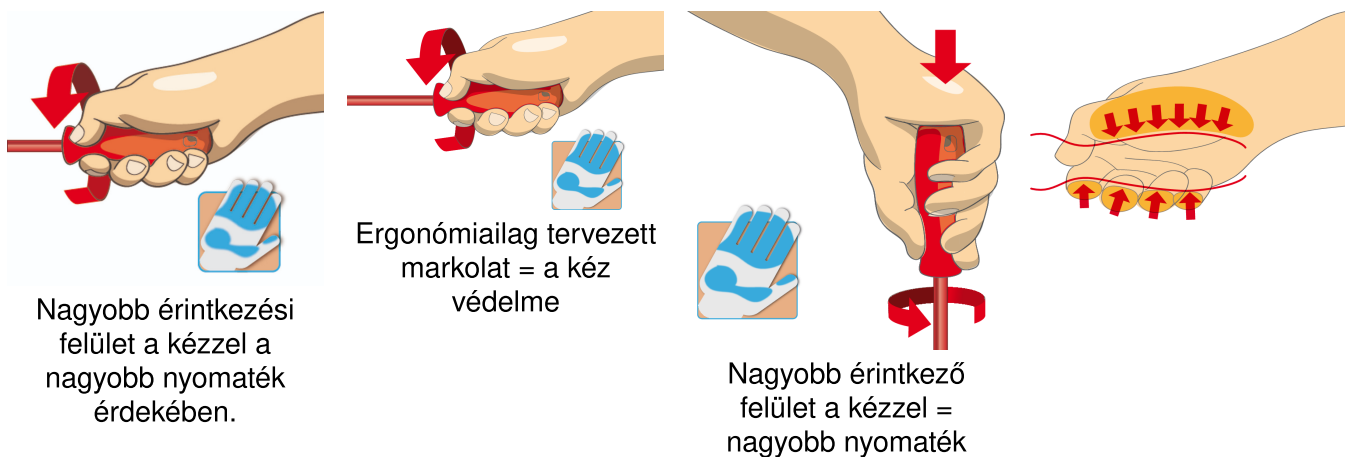

## Safety tips



- VDE tools that have several parts, have to be assembled correctly before use.
- When working with VDE tools avoid contact with water.



- Don't use tools that shows sign of wear and have the second layer of plastic visible.

## Frequently asked questions

### Are insulated (VDE) tools considered as personal protective equipment (PPE)?

According to EU regulations, VDE tools are not considered as PPE.

### Are the VDE tools only being sampled in series production?

The high voltage test (at 10kV) is performed fully on each tool. Other tests are performed in accordance with the EN60900 standard.