

# VDE Dopschroevendraaier, TBI

629VDEETBI



## Profielen





## Standaard

DIN EN IEC 60900 (VDE 0682-201):2019-04; EN IEC 60900:2018

## Product attributen

- lemmet: Chrome-vanadium-molybdenum staal, volledig gehard en getemperd
- handvat: ergonomische vorm
- drie componenten materiaal
- met gaatje om op te hangen
- gemaakt volgens norm DIN EN IEC 60900 (VDE 0682-201):2019-04; EN IEC 60900:2018
- gemaakt volgens norm DIN 3125




|  |  | C   | L   |  |
|--|---|-----|-----|---|
| 616464   | 5.5   | 125 | 225 | 103   |
| 616465   | 6   | 125 | 225 | 103   |

|  |  |  |  |  |
|---|--|--|--|--|
| 616466  | 7  | 125  | 235  | 123  |
| 616467  | 8  | 125  | 235  | 140  |
| 623341  | 9  | 125  | 235  | 124  |
| 616468  | 10   | 125  | 235  | 157  |
| 623342  | 11   | 125  | 235  | 159  |
| 616469  | 13   | 125  | 245  | 186  |
| 623445  | 14   | 125  | 245  | 166  |

\* Afbeeldingen van producten zijn symbolisch. Alle afmetingen zijn in mm en gewicht in gram. Alle vermelde afmetingen kunnen variëren in tolerantie.

## Gebruik (Afbeeldingen)

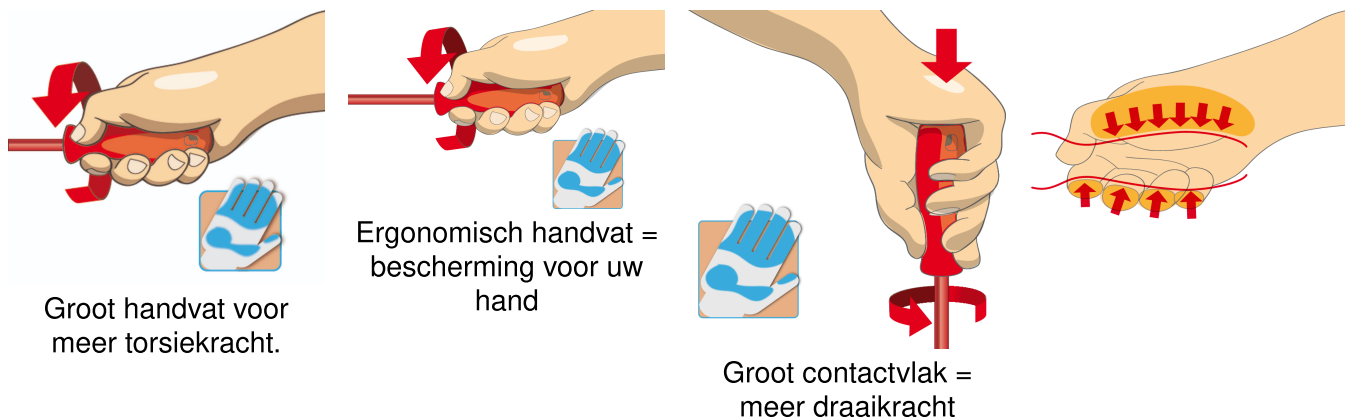

## Veiligheidstips



- VDE tools that have several parts, have to be assembled correctly before use.
- When working with VDE tools avoid contact with water.



- Don't use tools that shows sign of wear and have the second layer of plastic visible.

## Veelgestelde vragen

### Are insulated (VDE) tools considered as personal protective equipment (PPE)?

According to EU regulations, VDE tools are not considered as PPE.

### Are the VDE tools only being sampled in series production?

The high voltage test (at 10kV) is performed fully on each tool. Other tests are performed in accordance with the EN60900 standard.

