

Kliješta kombinirana

406/1VDEDP



Profili



Standardi

DIN EN IEC 60900 (VDE 0682-201):2019-04; EN IEC 60900:2018

Atributi proizvoda


- materijal: poseban alatni čelik
- kovana, potpuno poboljšana i ojačana
- rezni rubovi induktivno kaljeni
- čeljusti polirane
- završna obrada: kromiranje po standardu ISO 1456:2009
- izrađena prema standardu ISO 5746 i EN IEC 60900




Prednosti:

- ručke izolirane sa dva izolacijska sloja u dvije boje, koje omogućavaju dodatnu sigurnost


Važno!

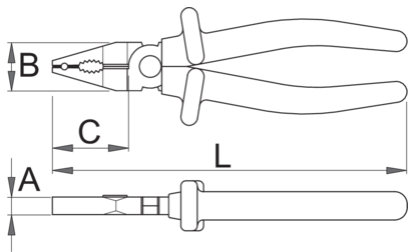- ukoliko drugi sloj postane vidljiv, alat zamijenite novim.



	L	B	C	A		
619177	140	23	32	8	157	
619178	160	24	35	9.5	219	

spособnost rezanja (10K=1kg)

	L	max 1560 N/mm² Ø↑		max 750 N/mm² Ø↑	
619177	140	1,6		2,0	
619178	160	1,6		2,0	

* Slike proizvoda su simbolične. Sve dimenzije su u mm, masa je u g.

Upotreba (pictures)


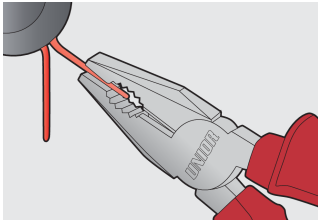


Photo (pictures)



Safety tips

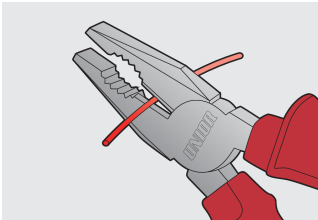

- Pliers should be oiled regularly. A drop of oil at the hinge will lengthen the tool life and assure easy operation.
- When cutting wire with pliers, you should always wear glasses or goggles.



- Don't use pliers for cutting hardened wire, unless specifically manufactured for this purpose.
- Don't expose pliers to excessive heat. This may ruin the tool.
- Don't use pliers as a hammer.
- Don't hammer on the handles. They may crack or break.
- Don't extend the length of plier handles to secure greater leverage.
- Don't use pliers on nuts or bolts. A wrench will do a better job and with less risk of damage to the fastener.

Frequently asked questions

Are certified insulated tools made through a different procedure than non-certified insulated tools?

The tools are made according to the same procedure.

Are insulated (VDE) tools considered as personal protective equipment (PPE)?

According to EU regulations, VDE tools are not considered as PPE.

Is it possible to work with insulated pliers under electrical voltage?

Yes, but only by professionals who follow safety requirements and use additional personal protective equipment.

Are the VDE tools only being sampled in series production?

The high voltage test (at 10kV) is performed fully on each tool. Other tests are performed in accordance with the EN60900 standard.