

# Kliješta kombinirana

406/1VDEDP



## Profili



## Zatvori pretraživanje

DIN EN IEC 60900 (VDE 0682-201):2019-04; EN IEC 60900:2018

## Atributi proizvoda


- materijal: Premium Plus ugljični čelik
- kovana, potpuno poboljšana i ojačana
- rezni rubovi induktivno kaljeni
- čeljusti polirane
- završna obrada: kromiranje po standardu ISO 1456:2009
- izrađena prema standardu ISO 5746 i EN IEC 60900



## Prednosti:

- ručke izolirane sa dva izolacijska sloja u dvije boje, koje omogućavaju dodatnu sigurnost


Važno!

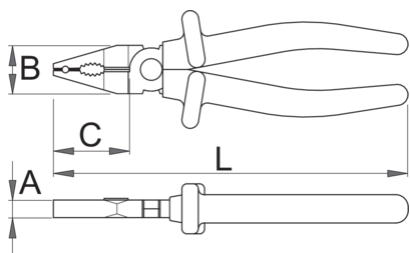- ukoliko drugi sloj postane vidljiv, alat zamijenite novim.



	L	B	C	A	
619177	140	23	32	8	157
619178	160	24	35	9.5	219
619179	180	27	38	10	269
619180	200	29	41	10.5	321
619181	220	32	47	11	376

sposobnost rezanja (10K=1kg)

	L	max 1600 N/mm <sup>2</sup> Ø↑	max 650 N/mm <sup>2</sup> Ø↑
619177	140	1,6	2,0
619178	160	1,6	2,0
619179	180	1,8	2,5
619180	200	2,0	2,5
619181	220	2,0	3,0

\* Slike proizvoda su simbolične. Sve dimenzije su u mm, masa je u g.

upotreba (pictures)


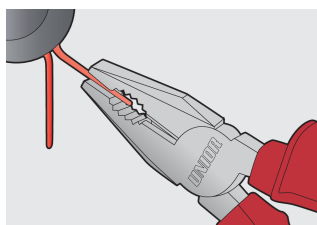


Photo (pictures)



## Safety tips

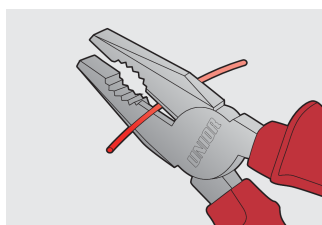

- Pliers should be oiled regularly. A drop of oil at the hinge will lengthen the tool life and assure easy operation.
- When cutting wire with pliers, you should always wear glasses or goggles.



- Don't use pliers for cutting hardened wire, unless specifically manufactured for this purpose.
- Don't expose pliers to excessive heat. This may ruin the tool.
- Don't use pliers as a hammer.
- Don't hammer on the handles. They may crack or break.
- Don't extend the length of plier handles to secure greater leverage.
- Don't use pliers on nuts or bolts. A wrench will do a better job and with less risk of damage to the fastener.

## Frequently asked questions

**Are certified insulated tools made through a different procedure than non-certified insulated tools?**

The tools are made according to the same procedure.

**Are insulated (VDE) tools considered as personal protective equipment (PPE)?**

According to EU regulations, VDE tools are not considered as PPE.

**Is it possible to work with insulated pliers under electrical voltage?**

Yes, but only by professionals who follow safety requirements and use additional personal protective equipment.

**Are the VDE tools only being sampled in series production?**

The high voltage test (at 10kV) is performed fully on each tool. Other tests are performed in accordance with the EN60900 standard.