

# Ađır hizmet tipi yan keskiler, yüksekliklerde güvenli alıřma için

466/1VDP-H



## Profiles



## Product features


- malzeme: özel alet eliđi
- sıcak dövme, tamamen sertleřtirilmiř ve temperlenmiř
- kesici ađızlar endüksiyonla sertleřtirilmiřtir
- yüzey bitirme: ISO 1456:2009 standardına göre krom kaplamalı
- ISO 5749 ve EN IEC 60900 standardına göre yapılmıřtır

## Avantajları:

- saplar ek emniyet için ift katmanlı - ift renki yalıtımla yalıtılmıřtır
- Unior'un yükseklikte alıřma aletleri, araçların temel iřlevlerini, ergonomisini ve kullanıřlılıđını korumak veya bunları mümkün olan en küçük ölçüde azaltmak için tasarlanmıřtır.
- takım ađırlıđı her takımın üzerinde iřaretlenmiřtir

## Önemli!

- ikinci katmanın görünmesi halinde, VDE aletinizi yenisiyle deđiřtirin
- Yalıtılmıř alet, karabinalarla deđil, kordonlu bir kordonla kullanılmak üzere tasarlanmıřtır.

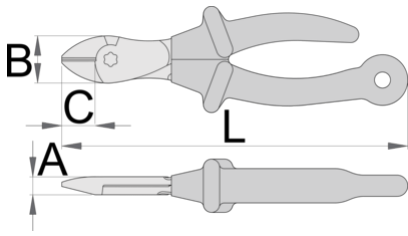

		L	B	A	C	
626964	180	215	28	11	21	351

cutting capacity (10N=1kg)

		max 2150 N/mm <sup>2</sup> Ø↑		max 650 N/mm <sup>2</sup> Ø↑	
626964	180	1,8		3,0	

\* Ürünlerin resimleri semboliktir. Bütün boyutlar mm ve ağırlık gram cinsindedir.

## Usage (pictures)



The carabiner on the lanyard is attached to the ring on the tool. The rings on the tools are large enough to accept 2 carabiners.



The carabiner on the lanyard has to be protected against opening using a lock ring.



Before removing the tool from the belt, unscrew the lock ring on the carabiner on the belt.



Open the carabiner on the belt and remove the tool, which is attached to a lanyard, from the carabiner on the belt. The tool is now ready for use.



Correct attachment of the tool to the lanyard. Return the tool to the belt following the steps in reverse order.



Using the socket remover (Article 1111) depress the pin in the hole while removing the socket from the square drive of the ratchet and then switch the socket or extension.

## Safety tips



- Always change tools in secure areas where there is no risk of falling tools.
- Always use tools with Unior carabiners and never use carabiners with a diameter less than 6mm.
- Tools being used at height should regularly be checked for damage and that there is no damage to lanyards, carabiners, attachment rings or belts.
- Don't use tools without attaching them to your work belt when working at height.
- Don't use and fix damaged tools.
- Don't exceed maximum weight of 2.3kg for individual tools that a worker can attach to their belt.

## Safety (pictures)



## Frequently asked questions

### **Are certified insulated tools made through a different procedure than non-certified insulated tools?**

The tools are made according to the same procedure.

### **Are insulated (VDE) tools considered as personal protective equipment (PPE)?**

According to EU regulations, VDE tools are not considered as PPE.

### **Is it possible to work with insulated pliers under electrical voltage?**

Yes, but only by professionals who follow safety requirements and use additional personal protective equipment.

**Are the VDE tools only being sampled in series production?**

The high voltage test (at 10kV) is performed fully on each tool. Other tests are performed in accordance with the EN60900 standard.