Клешти за кабелски папучи

425/4AB



Profiles


Premium

Product features

- материјал: специјален плус јаглероден челик
- целосно појачани и калени
- завршна површина: фосфатна по стандард ISO 9717
- робусни рачки изолирани со пластични навлаки

Употреба:

- за неизолирани стандардни и затворени терминали (1,5-6mm²), за сечење кабли и отстранување изолација

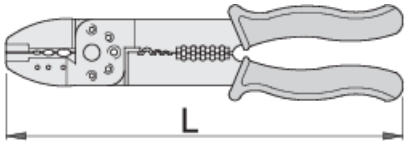

	mm²	L	
605806	1.5 - 6	240	320

* Сликите на производите се симболични. Сите димензии се во мм, тежината е во грамови. Сите наведени димензии може да се разликуваат во ниво на толеранција

Usage (pictures)



Photo (pictures)






Frequently asked questions

Why is it necessary to use crimping pliers for cable connections? Why not simply use combination pliers?
When working with cable connections, you must use crimping pliers because this is the only way to press the connections together correctly and accurately. This is a requirement for the safety of the joints and provided for by the grooves/shapes on the pliers.

Must the screw be screwed using the crimping pliers or can it just be pushed into the hole?
A screw with the appropriate dimensions must be screwed using the appropriate punch on the pliers.