



1693.16

EN Repair stand tool tray collar


SLO Objemka za odlagalni pladenj servisnih stojal

Unior d.d.
Kovaška cesta 10
3214 Zreče, Slovenia
T: +386 3 757 81 00
bike@unior.com
www.uniorbiketools.com

90963363

 **UNIOR**[®]
BIKE TOOLS


uniorbiketools.com

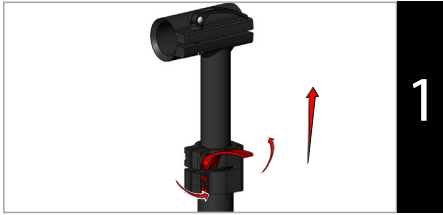

1

1 Odpnemo zapenjalca in nekoliko odvijemo oba imbus vijaka M6, da lahko iz spodnje cevi izvlečemo zgornjo cev in srednjo objemko s pušo.


Open the upper QR lever and unbolt both M6 hex bolts, pull up the upper sliding tube out of the repair stand frame together with the collar.

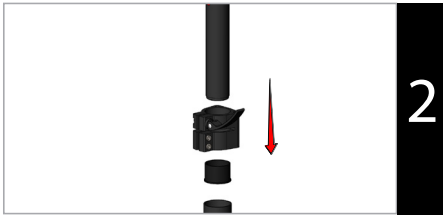

2

2 Preko kovice na zgornji cevi odstranimo srednjo objemko in pušo iz zgornje cevi.

Slide the plastic bushing and collar past the bottom out rivet.

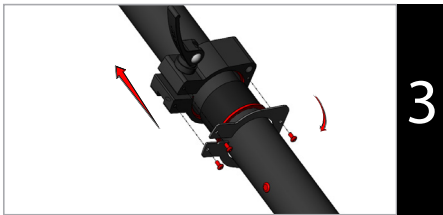

3

3 Na zgornjo cev preko kovice namestimo novo objemko, pušo in pokrov, ter pokrov fiksiramo s štirimi vijaki M3.

Slide the new tool tray collar, plastic bushing and metal cover on the tube and push it past the bottom out rivet, screw the metal cover with four M3 bolts to the collar.

POZOR: Podite pozorni na pravilno orientiranost objemke in puše. Objemka je pravilno orientirana, ko je pokrov puše na spodnji strani. Rob puše (označen rdeče na sliki) mora biti orientiran proti spodnjemu delu izvlečne cevi.

Attention: Make sure to install the collar and bushing correctly. Metal collar cover should be facing down, and the plastic bushing should be oriented with the edge (marked red on the drawing) towards the bottom end of the upper sliding tube.



4

4 Na novi objemki zapnemo zapenjalca in jo s tem fiksiramo. Na zgornjo cev, preko kovice namestimo staro objemko s pušo. Bodite pozorni na pravilno orientiranost plastične puše, rob puše mora biti obrnjen navzdol (označen rdeče na skici).


Close the QR lever on the new tool tray collar to fix it in place. Return the original collar and bushing back to the tube by sliding it past the bottom out rivet. Pay attention to the plastic bushing orientation, the edge of the bushing should be facing down (marked red on the drawing).



5

5 Staro objemko potisnemo na spodnjo cev in privijemo oba imbus vijaka M6 ter zapremo hitri zapiralec.

Slide the upper sliding tube back to the frame and attach the collar back in place, tighten down both M6 Hex bolts and close the QR lever.

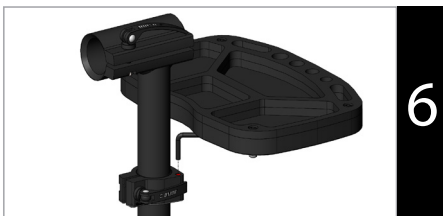

6

6 Objemka je nared za uporabo, v utora objemke vstavimo odlagalno posodo

Tool tray collar is now ready for use, attach the tool tray to it.