

Wall or bench mount clamp, manually adjustable

1693.2S-US




Profiles



Product features

- Bench or wall mount option.
- Intended for professional and home workshops.


- Suitable for tubes with diameter of min. Ø24 mm and max. Ø40 mm.
- Easy accessible screw enables us, to modify the jaw opening and pressure when closed. The screw can be turned with hand, without use of any wrench.

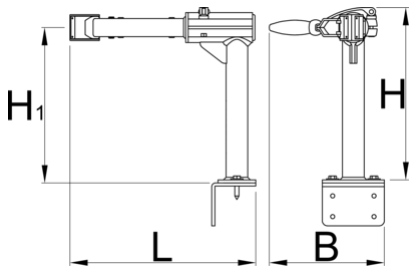


| | | | | | | |
|--------|----|----|-----|-----|-----|------|
| | | | | | | |
| 625021 | 24 | 38 | 120 | 239 | 313 | 4200 |

* Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.


Usage (pictures)

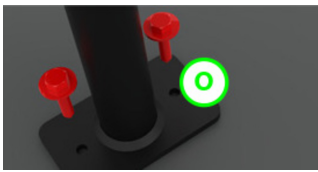

Mount stand on wooden bench? To mount the stand on a wooden bench, prepare the holes with drill size 6 mm and use the attached screws (O) as shown on picture.

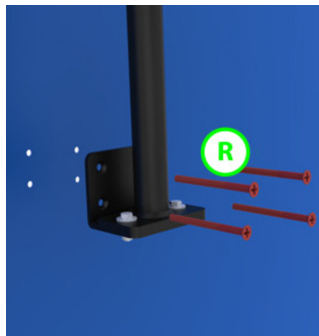


Mount stand on wall? To mount the stand to the wall, prepare the holes with drill size 10 mm and use attached screw anchors and screws (R).

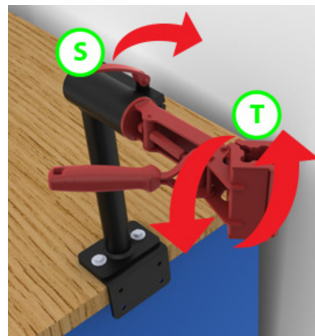

Adjust jaw angle and clamp bike safely? To adjust the bike stand jaw angle, release lever (S) and adjust/rotate (T).



Adjust opened jaw (U) to seatpost or bike tube. Turn handle (V) until jaw firmly grabs the tube.

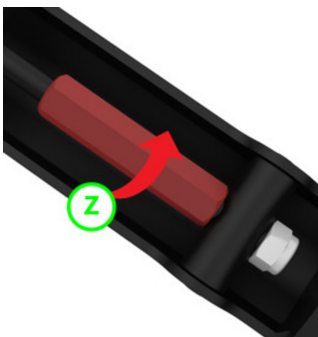

To adjust jaw opening, turn the long screw (Z) with hand in needed direction.



Release bike from stand? To release, firmly hold bike frame. Flip handle (Y) to quickly release tube from the jaw.

Spare parts



Replaceable rubber covers for clamp, round, 2 pcs set

Related products



Wall or bench mount clamp, auto adjustable