Veri formu
uniortools.com

izoleli süngülü yıldız (PH) tornavida, VDE

613VDE



Profiles

1000V IEC 60900 · Premium Hard

Standards

DIN EN IEC 60900 (VDE 0682-201):2019-04; EN IEC 60900:2018

Product features

- bıçak: krom vanadyum molibden çeliği, tamamen sertleştirilmiş ve temperlenmiş
- karartılmış uç
- sap: ergonomik şekilli
- sap: polipropilen
- asma deliği
- ISO 8764-1,2 ve EN IEC 60900 standardına göre yapılmıştır

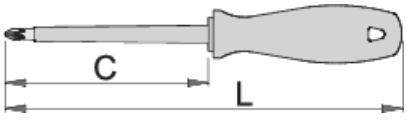

	+	C	L	
616478	PH0	60	145	34

		C	L	
616479	PH1	80	165	40
616480	PH2	100	200	74

* Ürünlerin resimleri semboliktir. Bütün boyutlar mm ve ağırlık gram cinsindendir.

Usage (pictures)

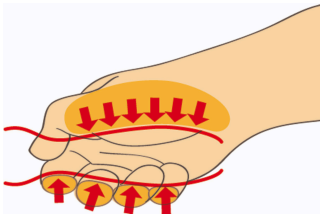

Ellerinizi korumak için ergonomik kol tasarımı.

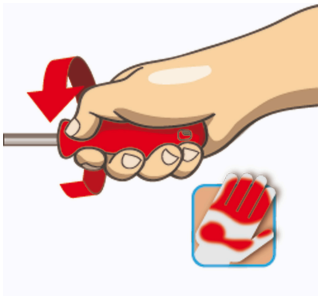

Daha fazla tork gücü için geniş elle temas alanı.

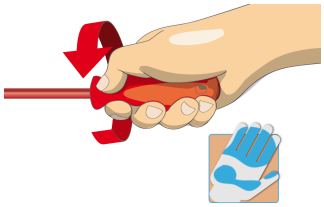

Ergonomik sap tasarımı = ellerinizi korur

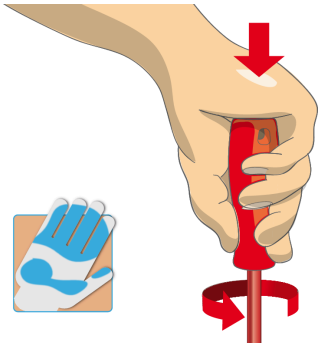

Geniş el temas alanı = daha fazla tork gücü

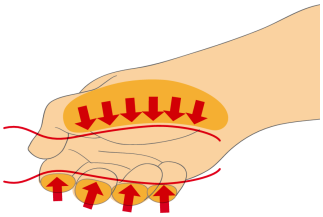

Safety tips

- Use a screw holding screwdriver to get screws started in awkward, hard-to-reach areas.
- Use a stubby screwdriver in close quarters where a conventional screwdriver cannot be used.
- A rounded tip should be redressed with a file; make sure edges are straight.
- Screwdrivers used in the shop are best stored in a rack. This way, the proper selection of the right screwdriver can be quickly made.
- Keep the screwdriver handle clean; a greasy handle is apt to cause accidents.
- A screwdriver should never be used as pry bar. If it is overstressed in this manner, the blade might break and send a particle

- Don't use pliers on the handle of a screwdriver to get extra turning power. A wrench should only be used on the square shank or bolster of a screwdriver that is especially designed for that purpose.
- Don't expose a screwdriver blade to excessive heat as it may reduce the hardness of the blade.
- Don't use a screwdriver with a split or broken handle.
- Don't use a regular screwdriver to check a storage battery or to determine if an electrical circuit is live.
- Don't use tools that shows sign of wear and have the second layer of plastic visible.

of steel into the operator's arm or even towards his eyes.

● VDE tools that have several parts, have to be assembled correctly before use.

● When working with VDE tools avoid contact with water.

Frequently asked questions

Are insulated (VDE) tools considered as personal protective equipment (PPE)?
According to EU regulations, VDE tools are not considered as PPE.

Are the VDE tools only being sampled in series production?
The high voltage test (at 10kV) is performed fully on each tool. Other tests are performed in accordance with the EN60900 standard.