Dana të kombinuara

405/4G



Profiles

Standards

ISO 5746

Product features

- Materiali: çeliku të veçantë mjet
- rënie të falsifikuara, ngurtësuar tërësisht dhe nevrik
- prerja buzë induksion thekur
- Kreu Sipërfaqja përfundojë: gjobë terren
- përfundojë sipërfaqe: Fosfat veshura standardit ISO 9717
- Detyrë e rëndë plastike trajton
- bërë sipas standardit ISO 5746

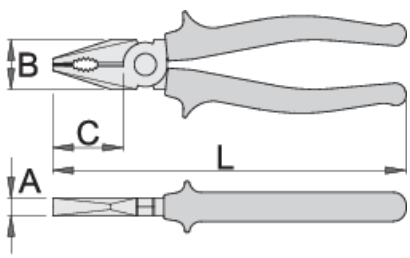

	L	B	C	A	
608668	160	24	35	9.5	224
608669	180	27	38	10	273
608670	200	29	41	10.5	351

Kapaciteti i prerjes (10N = 1 kg)

	L	max 1560 N/mm² Ø	max 750 N/mm² Ø
608668	160	1,6	2,0
608669	180	1,8	2,5
608670	200	2,0	2,5

* Imazhet e produkteve janë simbolike. Të gjitha dimensionet janë në mm, pesha në gram.Të gjitha dimensionet e listuara mund të ndryshojnë në tolerancë.

Usage (pictures)

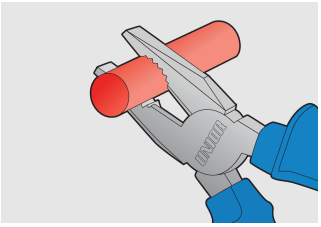
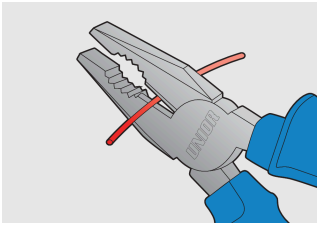
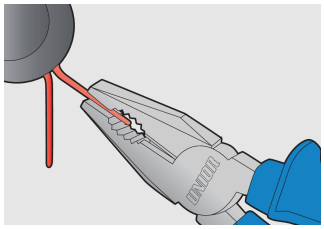

Safety tips

- Pliers should be oiled regularly. A drop of oil at the hinge will lengthen the tool life and assure easy operation.
- When cutting wire with pliers, you should always wear glasses or goggles.
- Handles are provided for comfort. They are not intended to give user any degree of protection against electric shocks and should never be used on live electric circuits.

- Don't use pliers for cutting hardened wire, unless specifically manufactured for this purpose.
- Don't expose pliers to excessive heat. This may ruin the tool.
- Don't use pliers as a hammer.
- Don't hammer on the handles. They may crack or break.
- Don't extend the length of plier handles to secure greater leverage.
- Don't use pliers on nuts or bolts. A wrench will do a better job and with less risk of damage to the fastener.