

# Стојалка со фиксна плоча и челуст со прилагодлива завртка

1693BS-US




Profiles

---



Product features

- Стојалката за поправка на велосипед со фиксирана подлога е дизајнирана за работилници за сервис и за секојдневна употреба.
- Фиксната подлога е ергономски дизајнирана. Максимален капацитет за товар е 30 kg, што овозможува да се поправаат потешки брдски велосипеди.
- Одговара на цевки со дијаметар од мин.  $\text{Ø}24$  mm и max.  $\text{Ø}40$  mm.
- тежина на стојалката е 36 kg.
- Заменливи гумени облоги за челюсти, арт. 1693.11

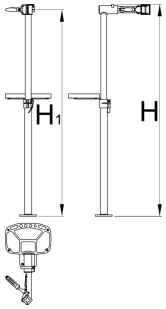

625013	985	1570	726	572	1700	38800

\* Сликите на производите се симболични. Сите димензии се во мм, тежината е во грамови. Сите наведени димензии може да се разликуваат во ниво на толеранција


Usage (pictures)




Adjust bike stand height? To adjust the bike stand height, release the lever (C) and adjust the top tube (D).



Adjust jaw angle and clamp bike safely? To adjust the bike stand jaw angle, release lever (F) and adjust/rotate (E).

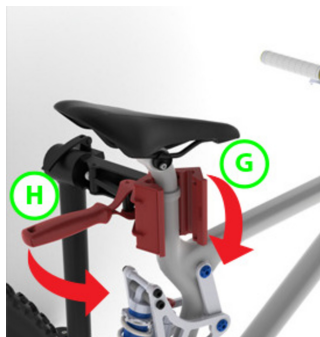

Adjust opened jaw (G) to the seatpost or bike tube. Turn handle (H) until jaw firmly grabs the tube.

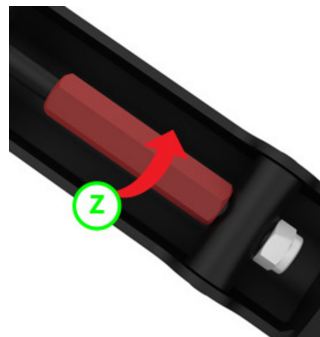

To adjust the jaw opening, turn the long screw (Z) with hand in needed direction as shown on picture.



Release bike safely from stand? To release, firmly hold bike frame. Flip handle (I) to quickly release tube from the jaw.



To mount the stand without fixed plate to the floor or ceiling, use appropriate screw anchors and screws (P) according to the floor/ceiling material, as shown on picture. Screws and screw anchors are not included.

## Spare parts



Заменливи гумени облоги за челюсти за 1693.1, 2 парчиња во гарнитура



QR Lever for 1693A, 1693B, 1693C, 1693R, 1693RP



Bushing for repair stands for 1693A, 1693B, 1693C, 1693R, 1693RP, 2pcs set