

TX profilli izoleli tornavida takımı VDE TBI

621CS6VDETBI



Profiles



Product features

Set includes:


 6x screwdriver with insulated blade VDE TBI with TX profile (article 621VDETBI) dim. TX10, TX15, TX20, TX25, TX27, TX30


Product name	SKU	Article	Dimensions	Quantity
TX profilli izoleli tornavida takımı VDE TBI	617049	621CS6VDETBI	TX 10 - TX 30	6

Product name	SKU	Article	Dimensions	Quantity
TX profilli izoleli süngülü tornavida VDE TBI	•	621VDETBI	TX 10, TX 15, TX 20, TX 25, TX 27, TX 30	6

* Ürünlerin resimleri semboliktir. Bütün boyutlar mm ve ağırlık gram cinsindendir.

Usage (pictures)

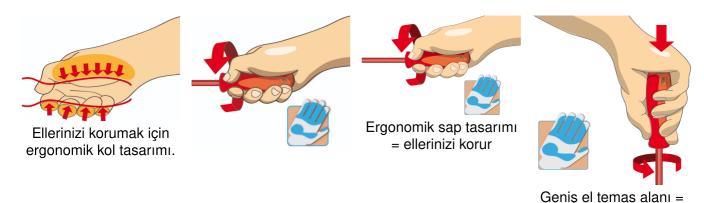

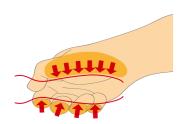

Safety tips



- Use a screw holding screwdriver to get screws started in awkward, hard-to-reach areas.
- Use a stubby screwdriver in close quarters where a conventional screwdriver cannot be used.
- A rounded tip should be redressed with a file;
 make sure edges are straight.
- Screwdrivers used in the shop are best stored in a rack. This way, the proper selection of the right screwdriver can be quickly made.
- Keep the screwdriver handle clean; a greasy handle is apt to cause accidents.
- A screwdriver should never be used as pry bar. If it is overstressed in this manner, the blade might break and send a particle of steel into the operator's arm or even towards his eyes.



 Don't use pliers on the handle of a screwdriver to get extra turning power. A wrench should only be used on the square shank or bolster of a screwdriver that is especially designed for that purpose.

daha fazla tork gücü

- Don't expose a screwdriver blade to excessive heat as it may reduce the hardness of the blade.
- Don't use a screwdriver with a split or broken handle.
- Don't use a regular screwdriver to check a storage battery or to determine if an electrical circuit is live.
- Don't use tools that shows sign of wear and have the second layer of plastic visible.

- VDE tools that have several parts, have to be assembled correctly before use.
- When working with VDE tools avoid contact with water.