

Reggiciclo con piastra fissa e ganascia con dado regolabile

1693BS-US










Profili

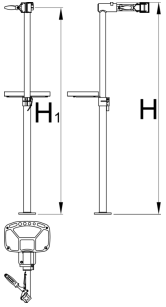

Attributi del prodotto

- Il reggiciclo per riparazione biciclette con piastra fissa è ideato per officine di riparazione e per un utilizzo quotidiano.
- La piastra fissa ha un design ergonomico. La portata massima è 30 Kg., il che consente la manutenzione di biciclette più pesanti.
- Compatibile con tubi con diametro min. Ø24 mm e max. Ø40 mm.
- Il peso del reggiciclo è 36 Kg.
- Copertura in gomma della ganascia, sostituibile, art. 1693.11



						
625013	985	1570	726	572	1700	38800

* Le immagini dei prodotti sono puramente simboliche. Tutte le dimensioni sono in mm, peso in grammi.


Utilizzo (pictures)




Adjust bike stand height? To adjust the bike stand height, release the lever (C) and adjust the top tube (D).



Adjust jaw angle and clamp bike safely? To adjust the bike stand jaw angle, release lever (F) and adjust/rotate (E).

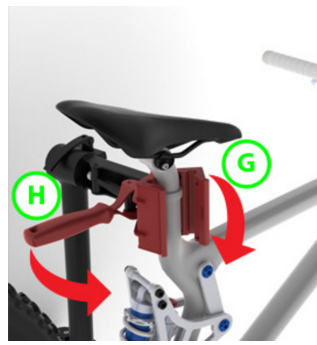

Adjust opened jaw (G) to the seatpost or bike tube. Turn handle (H) until jaw firmly grabs the tube.

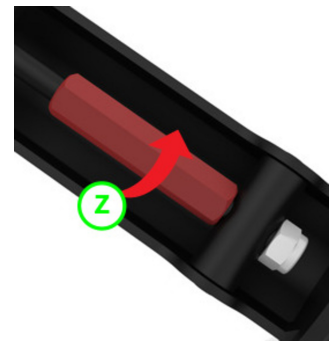

To adjust the jaw opening, turn the long screw (Z) with hand in needed direction as shown on picture.



Release bike safely from stand? To release, firmly hold bike frame. Flip handle (I) to quickly release tube from the jaw.



To mount the stand without fixed plate to the floor or ceiling, use appropriate screw anchors and screws (P) according to the floor/ceiling material, as shown on picture. Screws and screw anchors are not included.