

Mur dhe stol nofulla me arrë rregullueshme

1693.2S-US




Profiles



Product features

- Vend apo mur malin opsion.
- Të destinuar për seminare profesionale dhe në shtëpi.

- I përshtatshëm për tuba me diametër prej min. Ø24 mm dhe max. Ø40 mm.
- Vidhos lehtë të arritshme na mundëson, që të modifikojë hapjen nofulla dhe presion kur të mbyllura. Vidë mund të shndërrohet me dorë, pa përdorimin e ndonjë celes.

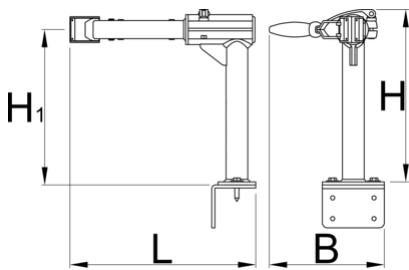


| | | | | | | |
|--------|----|----|-----|-----|-----|------|
| | | | | | | |
| 625021 | 24 | 38 | 120 | 239 | 313 | 4200 |

* Imazhet e produkteve janë simbolike. Të gjitha dimensionet janë në mm, pesha në gram. Të gjitha dimensionet e listuara mund të ndryshojnë në tolerancë.


Usage (pictures)



Mount stand on wooden bench? To mount the stand on a wooden bench, prepare the holes with drill size 6 mm and use the attached screws (O) as shown on picture.

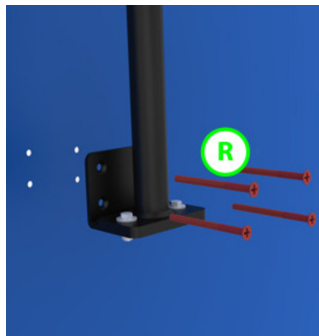


Mount stand on wall? To mount the stand to the wall, prepare the holes with drill size 10 mm and use attached screw anchors and screws (R).

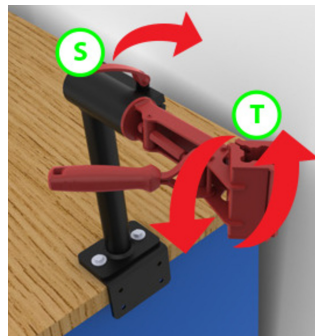


Adjust jaw angle and clamp bike safely? To adjust the bike stand jaw angle, release lever (S) and adjust/rotate (T).



Adjust opened jaw (U) to seatpost or bike tube. Turn handle (V) until jaw firmly grabs the tube.

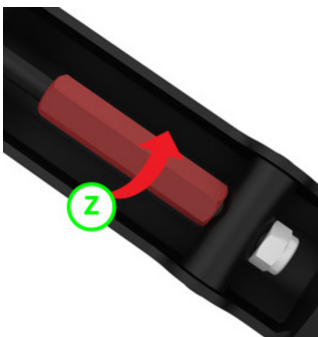

To adjust jaw opening, turn the long screw (Z) with hand in needed direction.

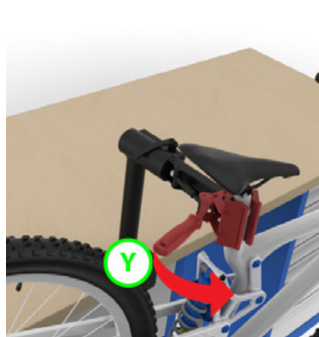

Release bike from stand? To release, firmly hold bike frame. Flip handle (Y) to quickly release tube from the jaw.

Spare parts



Replaceable rubber covers for clamp, round, 2 pcs set

Related products



Mur dhe nofulla stol me pranverën