

Челуст со прилагодлива завртка за на сид и пулт

1693.2S-US




Profiles



Product features

- Со можност за монтирање на работна маса или на сид
- Наменето за професионални и домашни работилници.


- Одговара на цевки со дијаметар од мин.Ø24 mm и max. Ø40 mm.
- Лесно достапниот штраф ни овозможува да го модифицираме отварањето на челуста и притисокот кога е затворена. Штрафот може да се заврти со рака, без употреба на било каков клуч.

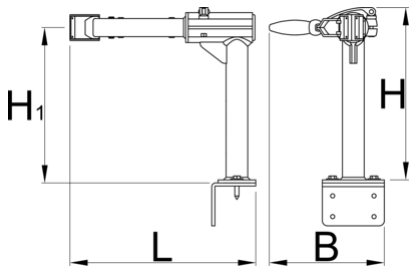


625021	24	38	120	239	313	4200

* Сликите на производите се симболични. Сите димензии се во мм, тежината е во грамови. Сите наведени димензии може да се разликуваат во ниво на толеранција


Usage (pictures)

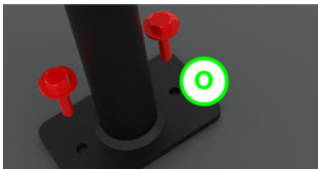

Mount stand on wooden bench? To mount the stand on a wooden bench, prepare the holes with drill size 6 mm and use the attached screws (O) as shown on picture.

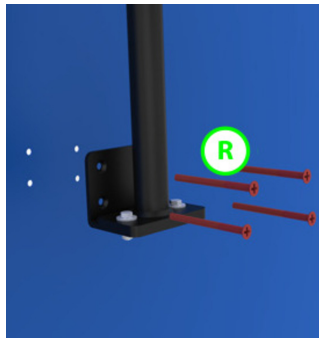


Mount stand on wall? To mount the stand to the wall, prepare the holes with drill size 10 mm and use attached screw anchors and screws (R).

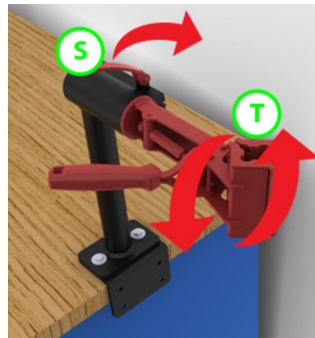

Adjust jaw angle and clamp bike safely? To adjust the bike stand jaw angle, release lever (S) and adjust/rotate (T).



Adjust opened jaw (U) to seatpost or bike tube. Turn handle (V) until jaw firmly grabs the tube.

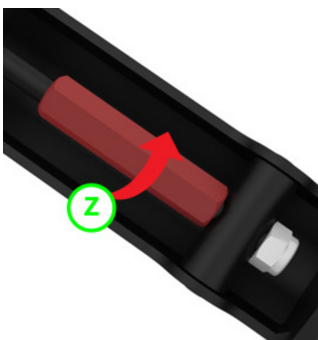

To adjust jaw opening, turn the long screw (Z) with hand in needed direction.



Release bike from stand? To release, firmly hold bike frame. Flip handle (Y) to quickly release tube from the jaw.

Spare parts



Replaceable rubber covers for clamp, round, 2 pcs set



Заменливи гумени облоги за челюсти за 1693.1, 2 парчиња во гарнитура

Related products



Свивлива челюст на стега со федер